 



S4 Battery Replacement

 
Step 1- Remove screws (2) fastening the battery cover at the rear of the monitor as shown.



Step 2- Remove the Battery Cover as shown.

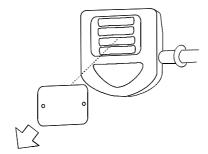


Step 3- Remove Batteries as shown.






S4 Battery Replacement

 Step 4- Replace Batteries as shown.



Step 5- Replace the Battery Cover as shown.

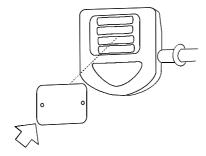

Step 6- Replace the screws (2) fastening the battery cover at the rear of the monitor as shown.

